



**Uconnect® 5.0**

# Owner's Manual Supplement

| TABLE OF CONTENTS |                                                  |      |
|-------------------|--------------------------------------------------|------|
| SECTION           |                                                  | PAGE |
| 1                 | IDENTIFYING YOUR RADIO .....                     | 3    |
| 2                 | RADIO MODE .....                                 | 7    |
| 3                 | MEDIA MODE .....                                 | 13   |
| 4                 | UCONNECT® PHONE .....                            | 19   |
| 5                 | UCONNECT® 5.0 VOICE RECOGNITION QUICK TIPS ..... | 25   |
| 6                 | SETTINGS MAIN MENU .....                         | 35   |
| 7                 | MORE MAIN MENU .....                             | 41   |
| 8                 | SAFETY GUIDELINES .....                          | 43   |

|   |
|---|
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |



---

# IDENTIFYING YOUR RADIO

## CONTENTS

---

|                                   |   |                                  |   |
|-----------------------------------|---|----------------------------------|---|
| ■ IDENTIFYING YOUR RADIO. . . . . | 4 | ■ Uconnect® 5.0 SYSTEM . . . . . | 5 |
|-----------------------------------|---|----------------------------------|---|

#### 4 IDENTIFYING YOUR RADIO

### IDENTIFYING YOUR RADIO

 
#### Uconnect® 5.0



#### Key Features:

- 5" Touchscreen
- Three buttons on either side of the display
- Hands-free/Bluetooth®
- SiriusXM Satellite Radio (If Equipped)

## Uconnect® 5.0 SYSTEM

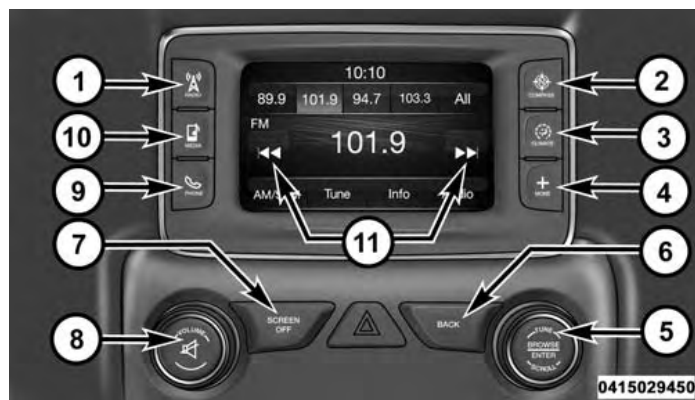

### 1 — RADIO

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM and SXM (if equipped), can be selected by pressing the corresponding buttons on the touchscreen in Radio Mode.

### 2 — COMPASS

Push the COMPASS button on the faceplate to display the current direction of the vehicle.

### 3 — CLIMATE — IF EQUIPPED

If a CLIMATE button on the faceplate exists, push this button to access the Climate Controls. If not, push the MORE button on the faceplate then the “Settings” button on the touchscreen.

### 4 — MORE

Push the MORE button on the faceplate to access additional options.

### 5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

## 6 IDENTIFYING YOUR RADIO

### 6 — BACK

Push the BACK button to return to a previous menu or screen.

### 7 — SCREEN OFF

Push the SCREEN OFF button to turn the touchscreen OFF. To turn the touchscreen back ON, just press the screen.

### 8 — VOLUME/MUTE

Rotate the rotary knob to adjust the Volume. Push the VOLUME/MUTE button to mute the system.

### 9 — PHONE

Push the PHONE button on the faceplate to access the Uconnect® Phone feature.

### 10 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch to Media mode (CD — if equipped, USB/iPOD®, AUX, SD Card — if equipped and Bluetooth®).

### 11 — SEEK UP ►►/SEEK DOWN◄◄

Press the “Seek Up” ►► and the “Seek Down” ◄◄ buttons on the touchscreen to seek through radio stations in AM, FM or SXM bands. Seek through tracks in CD (if equipped) or iPod® modes.

---

## RADIO MODE

### CONTENTS

2

|                                                |   |                                                   |    |
|------------------------------------------------|---|---------------------------------------------------|----|
| ■ RADIO MODE . . . . .                         | 8 | □ SiriusXM Satellite Radio Mode — If Equipped . . | 10 |
| □ Volume/Mute. . . . .                         | 8 | □ SiriusXM All Access Package . . . . .           | 10 |
| □ Enter/Browse & Tune/Scroll Control . . . . . | 8 | □ Audio . . . . .                                 | 11 |
| □ Seek Functions . . . . .                     | 8 | □ Clock Setting . . . . .                         | 12 |
| □ Setting Presets . . . . .                    | 9 |                                                   |    |



## 8 RADIO MODE

### RADIO MODE

The radio is equipped with the following modes:

- AM
- FM
- SXM SiriusXM Satellite Radio (If Equipped)

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM, and SXM, can then be selected by pressing the corresponding button on the touchscreen in the Radio mode.

### Volume/Mute

Rotate the VOLUME/MUTE rotary knob to adjust the Volume. When the audio system is turned on, the sound will be set at the same volume level as last played.

Push the VOLUME/MUTE button to mute the system. Push the VOLUME/MUTE button again to unmute the system.

### Enter/Browse & Tune/Scroll Control

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

### Seek Functions

#### Seek Up▶▶

Press and release the “Seek Up” ▶▶ button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

**Fast Seek Up** ►►

Press and hold the “Seek Up” ►► button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

**Seek Down** ◀◀

Press and release the “Seek Down” ◀◀ button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

**Fast Seek Down** ◀◀

Press and hold the “Seek Down” ◀◀ button on the touchscreen to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

**Setting Presets**

The Presets are available for all Radio Modes, and are activated by pressing any of the four “Preset” buttons on the touchscreen, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on the touchscreen for more than two seconds or until you hear a confirmation beep.

## 10 RADIO MODE

The Radio stores up to 12 presets in each of the Radio modes. Four presets are visible at the top of the radio screen.

Pressing the “All” button on the touchscreen will display all of the preset stations for that mode.

### SiriusXM Satellite Radio Mode — If Equipped

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM is a subscription based service.

### SiriusXM All Access Package

All satellite radio equipped vehicles come with a one year trial to the Sirius All Access package, providing over 160 channels of the best programming for all the places life takes you.

- In your vehicle — You’ll get every channel available on your radio, including all the premium programming like Howard Stern, every NFL® game, every MLB® game, every NASCAR® race, Oprah Radio and more.

- On the go — With a SiriusXM Internet Radio subscription included with the All Access trial, you’ll get SiriusXM on your computer, smarthphone, or tablet.

Including:

- A huge On Demand catalog.
- Xtra Channels featuring SiriusXM Latino — A collection of Spanish-language channels.
- MySXM — Allowing you to personalize your favorite music channels.

Go to [siriusxm.com/getallaccess](http://siriusxm.com/getallaccess) for more information. SiriusXM services require subscriptions, sold separately after the 12-month trial included with your new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.**

See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our SiriusXM satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2013 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. Service available in Canada; see [www.siriuscanada.ca](http://www.siriuscanada.ca).

This functionality is only available for radios equipped with a Satellite receiver. To receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the touchscreen shows “Acquiring Signal”, you may have to change the vehicle’s position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

## Audio

1. Push the SETTINGS button on the right side of the radio faceplate. If the settings button is not present, push the MORE button on the faceplate then the “Settings” button on the touchscreen.
2. Scroll down and press the “Audio” button on the touchscreen to open the Audio menu.
3. The Audio Menu shows the following options for you to customize your audio settings:
  - **Equalizer** — Press the “Equalizer” button on the touchscreen to adjust the Bass, Mid and Treble. Use the “+” or “-” buttons on the touchscreen to adjust the equalizer to your desired settings. Press the “Back Arrow” button on the touchscreen when done.

## 12 RADIO MODE

- **Balance/Fade** — Press the “Balance/Fade” button on the touchscreen to adjust the sound from the speakers. Use the “arrow” button on the touchscreen to adjust the sound level from the front and rear or right and left side speakers. Press the Center “C” button on the touchscreen to reset the balance and fade to the factory setting. Press the “Back Arrow” button on the touchscreen when done.
- **Speed Adjustable** — Press the “Speed Adjusted Volume” button on the touchscreen to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the “Back Arrow” button on the touchscreen when done.
- **Loudness** — Press the “Loudness” button on the touchscreen to select the Loudness feature. When this feature is activated it improves sound quality at lower volumes.

### Clock Setting

1. If a SETTINGS button on the right side of faceplate exists, push this button. If not, push the MORE button on the faceplate then the “Settings” button on the touchscreen.
2. Select the “Clock and Date” button on the touchscreen.
3. Next, select “Set Time” to change the time.
4. Select “Set Date” to change the date.
5. To set the time, select the “Seek Up” ►► or “Seek Down” ◄◄ arrows as appropriate. Select “12 hrs vs 24 hrs”, “AM” or “PM” or select the “Time Zones” (if equipped).
6. Select “Done” when complete.

---

## MEDIA MODE

### CONTENTS

---

|                                     |    |                             |    |
|-------------------------------------|----|-----------------------------|----|
| ■ MEDIA MODE . . . . .              | 14 | □ USB/iPod® Mode . . . . .  | 17 |
| □ Common Media Functions . . . . .  | 14 | □ AUX Mode . . . . .        | 17 |
| □ Disc Mode — If Equipped . . . . . | 16 | □ Bluetooth® Mode . . . . . | 18 |

## MEDIA MODE

Media Mode is entered by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the "Source" button on the touchscreen and the desired mode button on the touchscreen. Disc — If Equipped, USB, SD Card — If Equipped, AUX and Bluetooth® — If Equipped, are the Media sources available. When available, you can select the "Browse" button on the touchscreen to be given these options:

- Now Playing
- Artists
- Albums
- Genres
- Songs
- Playlists
- Folders

You can press the "Source," "Pause/Play" or the "Info" button on the touchscreen for artist information on the current song playing.

### Common Media Functions

#### Seek Up ►►/Seek Down◄◄

Press and release the "Right Arrow" ►► button on the touchscreen for the next selection. Press and release the "Left Arrow" ◄◄ button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first second of the current selection.

#### Fast Seek Up►►►

Press and hold the "Right Arrow" ►►► button on the touchscreen and the desired mode will begin to fast forward through the current track until the button on the touchscreen is released.

**Fast Seek Down** ◀◀

Press and hold the “Left Arrow” ◀◀ button on the touchscreen and the desired mode will begin to rewind through the current track until the button on the touchscreen is released.

**Source**

Press the “Source” button on the touchscreen to select the desired audio source, Disc — If Equipped, USB, SD — If Equipped, AUX and Bluetooth® — If Equipped. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

**Info**

Press the “Info” button on the touchscreen to display the current track information. Press the “X” button on the touchscreen to cancel this feature.

**Shuffle**

Press the “Shuffle” button on the touchscreen to play the selections on the USB/iPod® device in random order to provide an interesting change of pace. Press the “Shuffle” button on the touchscreen a second time to turn this feature off.

**Audio**

Refer to “Operating Instructions — Radio Mode” for adjusting the audio settings.

**Repeat**

Press the “Repeat” button on the touchscreen to repeat the song selection. To cancel repeat, press the “Repeat” button on the touchscreen a second time.



**Disc Mode — If Equipped**

If equipped, your vehicle may have a remote Disc player located in the center console storage bin.

Disc Mode is entered by either inserting a CD/Disc or by pushing the MEDIA button on the faceplate. Once in Media Mode, press the "Source" button on the touchscreen and select "Disc."

**Inserting Compact Disc**

Gently insert one Disc into the Disc player with the Disc label following the illustration indicated on the player. The Disc will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 in (2.5 cm), a Disc may already be loaded and must be ejected before a new Disc can be loaded.

If you insert a Disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play when you insert the Disc. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

**Browse**

Press the "Browse" button on the touchscreen to scroll through and select a desired track on the Disc. Press the "Exit" button on the touchscreen if you wish to cancel the browse function.

**Eject Button — Ejecting a Disc**

Push the EJECT button to eject the Disc. If you have ejected a Disc and have not removed it within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A Disc can be ejected with the radio and ignition OFF.

### USB/iPod® Mode

USB/iPod® Mode is entered by either inserting a USB Jump Drive or iPod® cable into the USB port, or by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the "Source" button on the touchscreen and select "USB/iPod."

#### Inserting USB/iPod® Device

Gently insert the USB/iPod® device into the USB Port. If you insert a USB/iPod® device with the ignition ON, the unit will switch to USB/iPod® mode and begin to play when you insert the device. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

### Browse

Press the "Browse" button on the touchscreen to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB/iPod® device. Once the desired selection is made you can chose from the available media by pressing the button on the touchscreen. Press the "Exit" button on the touchscreen if you wish to cancel the browse function.

### AUX Mode

AUX Mode is entered by inserting a AUX device using a stereo cable with a 3.5 mm audio jack into the AUX port, or by pushing the MEDIA button located left of the display. Once in Media Mode, press the "Source" button on the touchscreen and select "AUX."

### Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert a Auxiliary device with the ignition ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

### Controlling The Auxiliary Device

The control of the Auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME/MUTE rotary knob, or with the volume of the attached device.

The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

### Bluetooth® Mode

Bluetooth® Streaming Audio (BTSA) or Bluetooth® Mode is entered by pairing a Bluetooth® device containing music to the Uconnect® system.

Before proceeding, the Bluetooth® device must be paired with the Uconnect® Phone to communicate with the Uconnect® system.

See the “Pairing Procedure” in this manual for further details.

Once the Bluetooth® device is paired to the Uconnect® system, push the MEDIA button located on the left side of the display. Once in Media Mode, press the “Source” button on the touchscreen and select “Bluetooth.”

**NOTE:** For mobile phone compatibility and pairing instructions, please visit [UconnectPhone.com](http://UconnectPhone.com).

---

# Uconnect® PHONE

## CONTENTS

---

|                                                                         |     |                                                                 |     |
|-------------------------------------------------------------------------|-----|-----------------------------------------------------------------|-----|
| ■ Uconnect® PHONE . . . . .                                             | .20 | □ Receiving A Call — Accept (And End) . . . . .                 | .23 |
| □ Pairing A Phone . . . . .                                             | .20 | □ Mute (Or Unmute) Microphone During Call . . .                 | .23 |
| □ Phonebook Download — Phonebook Transfer<br>From Mobile Phone. . . . . | .22 | □ Transfer Ongoing Call Between Handset And<br>Vehicle. . . . . | .23 |
| □ Making A Phone Call . . . . .                                         | .23 | □ Changing The Volume . . . . .                                 | .23 |

## Uconnect® PHONE

The Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).

The Uconnect® Phone allows you to dial a phone number with your mobile phone using simple voice commands.

**NOTE:** The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® Hands-Free Profile. To check mobile phone compatibility please visit [UconnectPhone.com](http://UconnectPhone.com).

For Uconnect® customer support:

- U.S. residents - visit [UconnectPhone.com](http://UconnectPhone.com) or call 1-877-855-8400
- Canadian residents - call 1-800-465-2001 (English) or 1-800-387-9983 (French)

## Pairing A Phone

To use the Uconnect® Phone feature, you must first pair your Bluetooth® phone with the Uconnect® system. Refer to [UconnectPhone.com](http://UconnectPhone.com) for the pairing procedure unique to your mobile phone.

### Start Pairing Procedure

1. Activate the Bluetooth® on your mobile phone.
2. Push the PHONE button on the faceplate.

**NOTE:** If no phone is paired with the system, the display shows a dedicated screen.

3. Press the “Yes” button on the touchscreen to start the pairing procedure. Search for the Uconnect® device on the mobile phone (if No is selected, the Phone main screen is displayed).

4. When prompted by the mobile phone, use its keyboard to enter the PIN code shown on the system display or confirm on the mobile phone the PIN displayed.

**NOTE:** During the pairing stage a screen is displayed indicating the progress of the operation.

- From the Phone screen you can always pair a mobile phone. Press the “Settings” button then press the “Add Device” button on the touchscreen and proceed as described above.
- If the pairing procedure is completed successfully, a screen is displayed. Press “Yes” to the question to pair the mobile phone as favorite (the mobile phone will have priority on all other mobile phones that will be paired later on). If no other devices are paired, the system will consider the first associated device as favorite.

**NOTE:** The priority is determined according to the order of connection for mobile phones which are not set as favorite. The last phone connected will have the highest priority.

For assistance in pairing your phone, contact Uconnect® customer support:

- U.S. residents - visit [UconnectPhone.com](http://UconnectPhone.com) for phone compatibility, pairing instructions and details or call 1-877-855-8400
- Canadian residents - call 1-800-465-2001 (English) or 1-800-387-9983 (French)

### Phonebook Download — Phonebook Transfer From Mobile Phone

If equipped and specifically supported by your phone, Uconnect® Phone will ask you if you want to download names (text names) and number entries from your mobile phone's phonebook. Specific Bluetooth® Phones with Phone Book Access Profile may support this feature. See UconnectPhone.com for supported phones.

#### NOTE:

- Download and update, if supported, begins as soon as the Bluetooth® wireless phone connection is made to the Uconnect® Phone, for example, after you start the vehicle.
- You may be asked for permission to initiate the phonebook download.
- A maximum of 1000 entries per phone will be downloaded and updated every time a phone is connected to the Uconnect® Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.
- Only the mobile phone's phonebook is downloaded. SIM card phonebook is not part of the Mobile phonebook.
- This downloaded phonebook cannot be edited or deleted on the Uconnect® Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect® Phone on the next phone connection.

**Making A Phone Call**

1. Push the PHONE button on the steering wheel.
2. After the BEEP, say “dial” (or “call” a full name or phone number).

**Receiving A Call — Accept (And End)**

1. When an incoming call rings or is announced on Uconnect®, push the PHONE button on the faceplate.
2. To end a call, push the PHONE button on steering wheel or the PHONE button on the faceplate.

**Mute (Or Unmute) Microphone During Call**

1. During a call, push the VOICE COMMAND button on the steering wheel.
2. After the BEEP, say “mute” (or “mute off.”)

**Transfer Ongoing Call Between Handset And Vehicle**

1. During a call, push the VOICE COMMAND button on the steering wheel.
2. After the BEEP, say “transfer call.”

**Changing The Volume**

1. Start a dialogue by pushing the PHONE button on the faceplate, then adjust the volume during a normal call.
2. Use the radio ON/VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect® system is speaking. Please note the volume setting for Uconnect® phone is different than the audio system volume setting.





---

# Uconnect® 5.0 VOICE RECOGNITION QUICK TIPS

## CONTENTS

---

|                                         |     |                                    |     |
|-----------------------------------------|-----|------------------------------------|-----|
| ■ Uconnect® VOICE RECOGNITION . . . . . | .26 | □ Media . . . . .                  | .30 |
| □ Introducing Uconnect® . . . . .       | .26 | □ Phone . . . . .                  | .31 |
| □ Get Started . . . . .                 | .26 | □ Voice Text Reply . . . . .       | .32 |
| □ Basic Voice Commands . . . . .        | .28 | □ Additional Information . . . . . | .33 |
| □ Radio . . . . .                       | .29 |                                    |     |

## Uconnect® VOICE RECOGNITION

### Introducing Uconnect®

Start using Uconnect® Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect® 5.0 system.

Key Features:

- 5" touchscreen
- Three buttons on either side of the display

 


### Get Started


1. Visit [UconnectPhone.com](http://UconnectPhone.com) to check mobile device and feature compatibility and to find phone pairing instructions.

2. Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.
3. Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.
4. Each time you give a Voice Command, you must first push either the VR or PHONE button, wait until **after** the beep, then say your Voice Command.
5. You can interrupt the help message or system prompts by pushing the VR or PHONE button and saying a Voice Command from current category.

All you need to control your Uconnect® system with your voice are the buttons on your steering wheel.

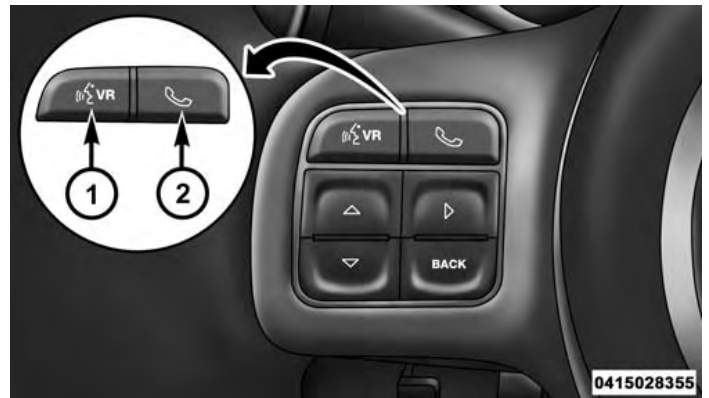

 - 1 — Push To Begin Radio Or Media Functions  
 2 — Push To Initiate, Answer, Or End A Phone Call, Send Or Receive A Text

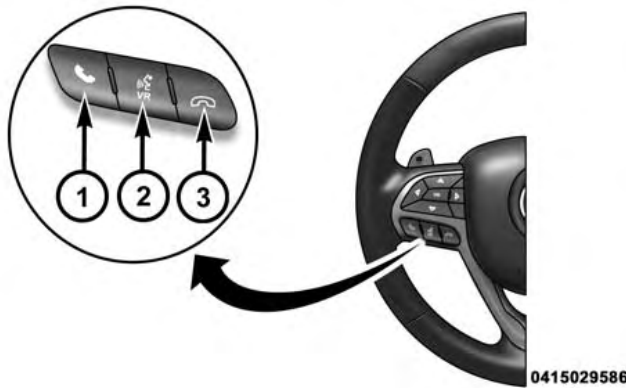

- 1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text  
 2 — Push To Begin Radio Or Media Functions  
 3 — Push To End Call


### Basic Voice Commands

 The basic Voice Commands below can be given at any point while using your Uconnect® system.

Push the VR button . After the beep, say...

- **Cancel** to stop a current voice session
- **Help** to hear a list of suggested Voice Commands
- **Repeat** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system's status. Cues appear on the touch-screen.

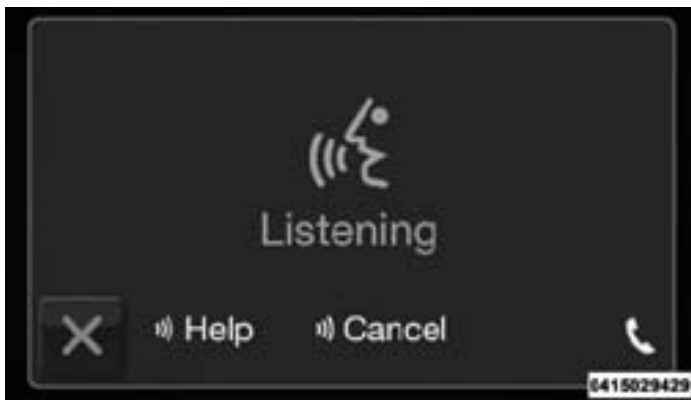

### Radio

Use your voice to quickly get to the AM, FM or SiriusXM Satellite Radio® stations you would like to hear. (Subscription or included SiriusXM Satellite Radio trial required.)

Push the VR button . After the beep, say...

- **Tune to** ninety-five-point-five FM

- **Tune to** Satellite Channel Hits 1

### TIP

At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button  and say **"Help."** The system will provide you with a list of commands.



## 30 Uconnect® 5.0 VOICE RECOGNITION QUICK TIPS

### Media

 
Uconnect® offers connections via USB, SD, Bluetooth® and Auxiliary ports (If Equipped). Voice operation is only available for connected USB and iPod® devices. (Remote CD player optional and not available on all vehicles.)

Push the VR button . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- **Change source** to Bluetooth®
- **Change source** to iPod®
- **Change source** to USB
- **Play artist** Beethoven; **Play album** Greatest Hits; **Play song** Moonlight Sonata; **Play genre** Classical

### TIP

Press the “Browse” button on the touchscreen to see all of the music on your iPod® or USB device. Your Voice Command must match **exactly** how the artist, album, song and genre information is displayed.

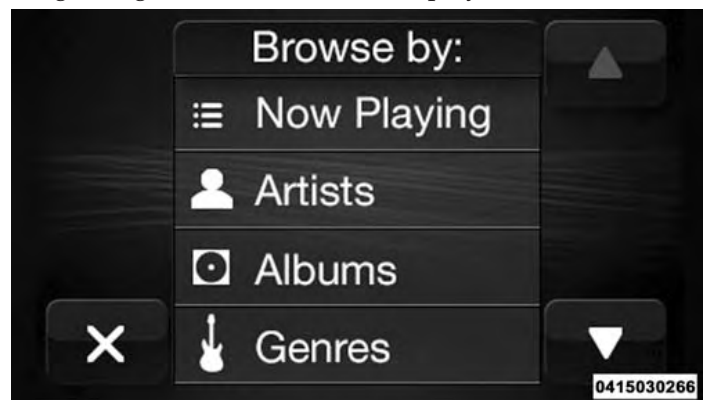

## Phone

Making and answering hands-free phone calls is easy with Uconnect®. When the Phonebook button is illuminated on your touchscreen, your system is ready. Check [UconnectPhone.com](http://UconnectPhone.com) for mobile phone compatibility and pairing instructions.

Push the PHONE button . After the beep, say one of the following commands:

- **Call** John Smith
- **Dial** 123-456-7890 and follow the system prompts
- **Redial** (call previous outgoing phone number)
- **Call back** (call previous incoming phone number)

## TIP

When providing a Voice Command, push the PHONE button  and say “**Call,**” then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say “**Call** John Smith **work.**”





Voice Text Reply

Uconnect® will announce **incoming** text messages. Push the PHONE button  and say **Listen**. (Must have compatible mobile phone paired to Uconnect® system.)

- 1. Once an incoming text message is read to you, push the PHONE button  . After the beep, say... **“Reply”**
- 2. Listen to the Uconnect® prompts. After the beep, repeat one of the pre-defined messages and follow the system prompts.

PRE-DEFINED VOICE TEXT REPLY RESPONSES

|                      |                       |                                  |
|----------------------|-----------------------|----------------------------------|
| Yes.                 | Stuck in Traffic.     | See you later.                   |
| No.                  | Start without me.     | I'll be Late.                    |
| Okay.                | Where are you?        | I will be <number> minutes late. |
| Call me.             | Are you there yet?    |                                  |
| I'll call you later. | I need directions.    | See you in <number> of minutes.  |
| I'm on my way.       | Can't talk right now. |                                  |
| I'm lost.            |                       | Thanks.                          |

TIP

Your mobile phone must have the full implementation of the **Message Access Profile (MAP)** to take advantage of this feature. For details about MAP, visit Uconnect-Phone.com. Apple iPhone® iOS6 or later supports reading **incoming** text messages only.

### Additional Information

© 2013 Chrysler Group LLC. All rights reserved. Mopar® and Uconnect® are registered trademarks and Mopar Owner Connect is a trademark of Chrysler Group LLC. Android is a trademark of Google Inc. SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc. Yelp, Yelp logo, Yelp burst and related marks are registered trademarks of Yelp®.

DriveUconnect.com

Uconnect® System Support 1-877-855-8400

Mon. – Fri., 7:00 am – 12:00 am, ET

Sat., 8:00 am – 10:00 pm, ET

Sun., 9:00 am – 5:00 pm, ET

Uconnect® Access Services Support 1-855-792-4241.  
Please have your Uconnect® Security PIN ready when you call.



---

## SETTINGS MAIN MENU

### CONTENTS

---

|                                             |    |                                         |    |
|---------------------------------------------|----|-----------------------------------------|----|
| ■ SETTINGS MAIN MENU . . . . .              | 36 | □ Doors & Locks — If Equipped . . . . . | 38 |
| □ Display . . . . .                         | 36 | □ Heated Seats — If Equipped. . . . .   | 38 |
| □ Voice — If Equipped . . . . .             | 37 | □ Engine Off Options . . . . .          | 38 |
| □ Clock & Date . . . . .                    | 37 | □ Compass Settings . . . . .            | 39 |
| □ Safety/Assistance — If Equipped . . . . . | 37 | □ Audio . . . . .                       | 40 |
| □ Lights . . . . .                          | 37 | □ Phone/Bluetooth® . . . . .            | 40 |
| □ Auto-On Comfort — If Equipped . . . . .   | 38 | □ SiriusXM Setup . . . . .              | 40 |

## SETTINGS MAIN MENU

Push the SETTINGS button on your faceplate, if one exists, to display the Settings Main Menu. If not, push the MORE button on the faceplate then the "Settings" button on your touchscreen. The Settings Main Menu contains the following options:

### Display

Press the "Display" button on the touchscreen.

### Display Mode

When in this display you may select one of the auto display settings. To change Mode status, press and release "Auto" or "Manual" buttons and then select "Done."

### Language

When in this display, you may select one of three languages for all display nomenclature. Press "Language" on the touchscreen. Press the "Back Arrow" button on the touchscreen to return to the previous menu.

### Units

When in this display, you may choose between US and Metric units of measure to be displayed in the EVIC. Press "US" or "Metric." Press the "Back Arrow" button on the touchscreen to return to the previous menu.

### Voice Resp. Length — If Equipped

When in this display, you may change the Voice Response Length settings. To change the Voice Response Length, press the "Brief" or "Detailed" button on the touchscreen. Press the "Back Arrow" button on the touchscreen to return to the previous menu.

### Touchscreen Beep

When in this display, you may turn on or shut off the sound heard when a touchscreen button is pressed. Press the "Touchscreen Beep" button on the touchscreen and select either On or Off. Press the "Back Arrow" button on the touchscreen to return to the previous menu.

### Voice — If Equipped

When in this display, you may change the Voice Response Length settings. To change the Voice Response Length, press the "Brief" or "Detailed" button on the touchscreen. Press the "Back Arrow" button on the touchscreen to return to the previous menu.

### Clock & Date

Refer to the "Radio" section for details.

### Safety/Assistance — If Equipped

Refer to "Understanding Your Instrument Panel/Uconnect® System" section in your vehicle Owner's Manual for details.

### Lights

When this feature is selected, it allows the adjustment of the amount of time the headlights remain on after the engine is shut off. To change the Headlights Off Delay setting, press the "Headlights Off Delay" button on the touchscreen, and choose either 0 sec, 30 sec, 60 sec or 90 seconds. Press the "Back Arrow" button on the touchscreen to return to the previous menu.

**Auto-On Comfort — If Equipped**

When this feature is selected, the driver's heated and/or ventilated seats and heated steering wheel (if equipped) are activated based on the outside temp. To make your selection, press the "Off", "Remote Start", or "All Starts" buttons on the touchscreen. (All Starts is functional with remote start or key start.) Press the "Back Arrow" button on the touchscreen to return to the previous screen.

**Doors & Locks — If Equipped**

Refer to "Understanding Your Instrument Panel/Uconnect® System" section in your vehicle Owner's Manual for details.

**Heated Seats — If Equipped**

Refer to "Understanding The Features Of Your Vehicle/Seats" section in your vehicle Owner's Manual for details.

**Engine Off Options**

 
When this feature is selected, the driver can choose to have the headlights remain on for 0, 30, 60, or 90 seconds when exiting the vehicle. To change the Headlight Off Delay status, select from "0 sec.," "30 sec.," "60 sec.," or "90 sec." buttons on the touchscreen to select your desired time interval. Press the "Back Arrow" button on the touchscreen to return to the previous menu.

## Compass Settings

### Compass Variance

Compass Variance is the difference between Magnetic North and Geographic North. To compensate for the differences the variance should be set for the zone where the vehicle is driven, per the zone map. Once properly set, the compass will automatically compensate for the differences, and provide the most accurate compass heading.

**NOTE:** Keep magnetic materials away from the top of the instrument panel, such as iPod's, Mobile Phones, Laptop Computers and Radar Detectors. This is where the compass module is located, and it can cause interference with the compass sensor, and it may give false readings. Compass will not show if vehicle has GPS activated.

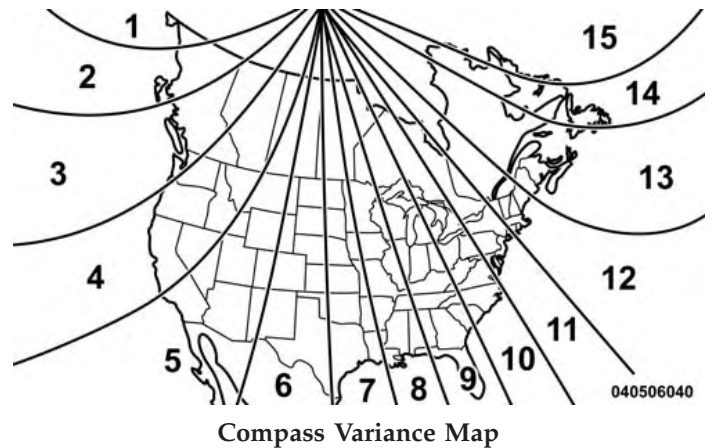



### Compass Calibration

Press the "Compass Calibration" button on the touchscreen to change this setting. This compass is self-calibrating, which eliminates the need to manually reset the compass. When the vehicle is new, the compass may appear erratic and it may need to be calibrated. You may also calibrate the compass by pressing the "Yes" button on the touchscreen popup and completing one or more 360-degree turns (in an area free from large metal or metallic objects) until the CAL indicator displayed in the EVIC turns off. The compass will now function normally.

### Audio

Refer to the "Operating Instructions/Radio" section in this manual for details.

### Phone/Bluetooth®

Refer to the "Uconnect® Phone" section in this manual for details.

### SiriusXM Setup

Refer to the "Radio" section in this manual for details.

---

# MORE MAIN MENU

## CONTENTS

---

|                            |    |                   |    |
|----------------------------|----|-------------------|----|
| ■ MORE MAIN MENU . . . . . | 42 | □ Clock . . . . . | 42 |
|----------------------------|----|-------------------|----|

## **MORE MAIN MENU**

Push the MORE button located on the faceplate to display the More Main Menu. The More Main Menu may contain the following options:

### **Clock**

Refer to the “Uconnect® 5.0/Radio Mode” section in this manual for details.

---

# SAFETY GUIDELINES

## CONTENTS

---

|                                               |    |                               |    |
|-----------------------------------------------|----|-------------------------------|----|
| ■ SAFETY GUIDELINES . . . . .                 | 44 | □ Disc Drive . . . . .        | 46 |
| □ Safe Usage Of The Uconnect® System. . . . . | 45 | □ FCC Declaration . . . . .   | 46 |
| □ Touchscreen . . . . .                       | 45 | □ Safety Information. . . . . | 47 |

**SAFETY GUIDELINES****WARNING!**

**ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

Ensure all persons read this manual carefully before using the system. It contains instructions on how to use the system in a safe and effective manner.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Ensure the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

### Safe Usage Of The Uconnect® System

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.
- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Keep drinks, rain and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

**NOTE:** Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

### Touchscreen

- Do not press the touchscreen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

**Disc Drive**

- Do not insert any damaged, warped, scratched or dirty Discs into the Disc Player.
- Discs that have been modified with an adhesive label should not be used in the Disc Player.
- Do not insert more than one Disc at a time into the drive slot.

**FCC Declaration**

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

## Safety Information

### Exposure To Radio Frequency Radiation

 
The radiated output power of the this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm (200 mm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.





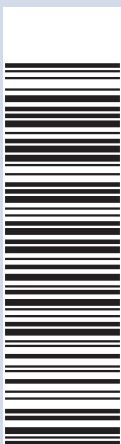

15UC5-526-AA  
First Edition  
Uconnect® 5.0  
Chrysler Group LLC  
Printed in the USA

